

# BioForme

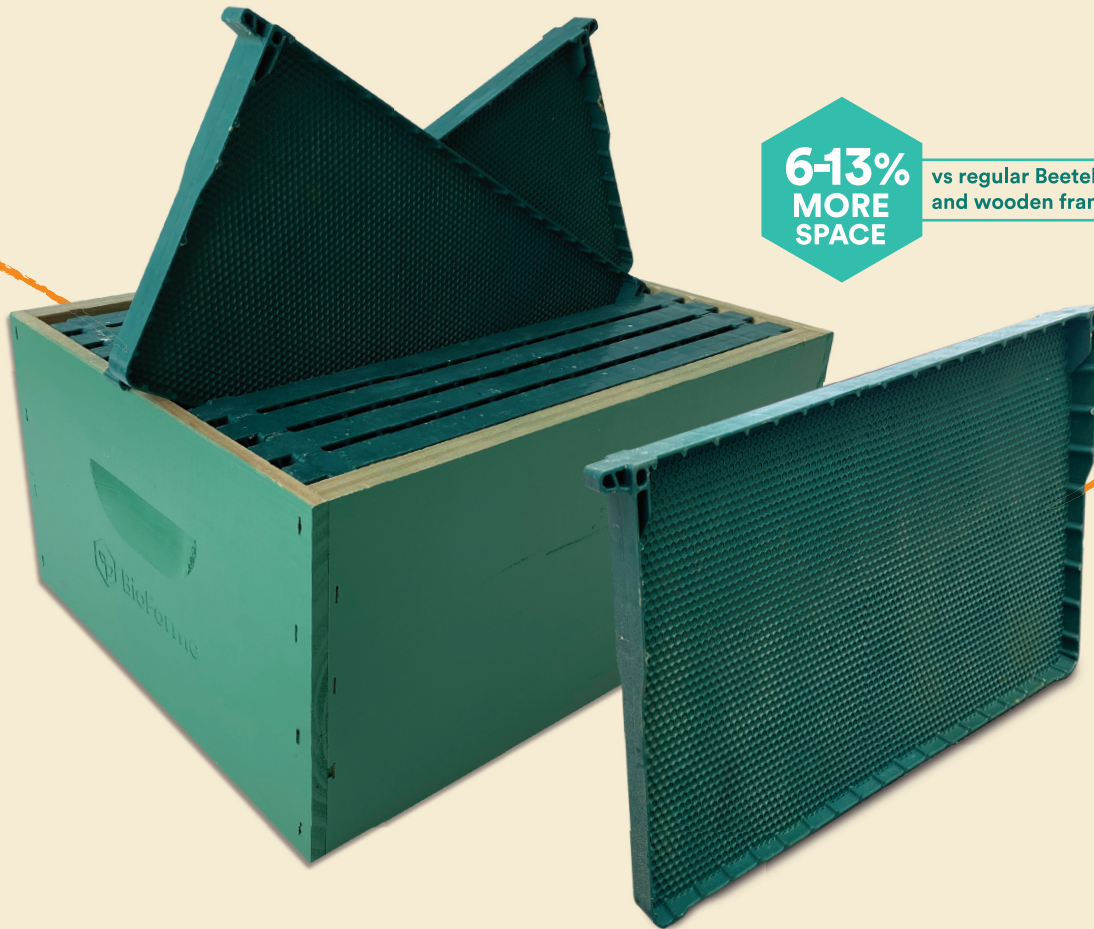
## Plant based, long life, zero waste





Available in:


Full Depth BioFrame Waxed Frame


RTG Full Depth Standard Plus Grade



 **Plant Based** - Made from sustainably grown, carbon neutral plant material emitting 77.8% less greenhouse gas during production versus traditional plastic frames.

 **Zero Waste** - BioForme frames burn clean, zero waste, end of life options for AFB-infected hives, frame replacement and frame cycling. Can be rewaxed and reused, or if damaged, commercially composted.

 **Durable** - Designed to withstand the rigours of beekeeping operations. Durable and maintains similar rigidity to plastic frames with slightly lower drop resistance

 **Easy to use** - Same dimensions as our plastic frames, new edge-to-edge moulding increased cells by 6-13% without compromising rigidity.

0800 11 77 66  
[ecrotek.co.nz](http://ecrotek.co.nz)

 **ECROTEK**  
*Keeping ahead*

# Product Information

Order Code / SKU	RTGSFSBW
Description	RTG box, dipped, assembled and painted 10 x BioForme Waxed Frames (30g)
Material	Polylactic acid
*Grade of Timber	70% standards 30% premiums
Outer Box Dimensions	508mm x 406mm x 240mm – 12mm Frame Rebate
Pallet Quantity	54 Units

Order Code / SKU	FRABFWAX30G
Description	Full Depth BioForme Frame 30g waxed
Material	Polylactic acid
Width	33mm
Carton Quantity	24 Units



## Handling and Care

BioForme frames are unique in many ways and need to be handled very differently to plastic frames. Under certain conditions BioForme frames can bow or twist. To minimise the risk of this occurring frames **MUST** be stored below 40°C, out of direct sunlight and kept in the original carton or hung inside a brood or honey box. BioForme shipping cartons can be stacked up to 2m high. Pallets must not be double stacked and heavy loads should not be placed on top of palletised BioForme cartons.



Store below  
40°C



Store out  
of sunlight



Do not  
double stack  
pallets



Store  
correctly



## Extraction

BioForme frames are compatible with prickers, but uncappers may need some adjustment to run correctly. Because of the additional width on the comb face, uncappers may not be able to uncap to the edges of the frame. Please trial frames through your extraction line before bulk purchasing.